


INSTALLATION OF WINDOW FRAMES

- A. Set unlead side of frame plumb and square in wall opening on control room side of wall with shims.
- B. Set leaded side of frame plumb and square in wall opening on X-Ray side of wall.
- C. Compress sides together against faces of wall.
- D. Install setting blocks, shims, and glazing tape in glazing channel to prevent glass from touching steel frame.
- E. Install radiation shielding glazing in telescopic frame.
- F. Place steel stops in position and mark location of pre-drilled holes in the stops on steel frame.
- G. Remove glazing and drill holes in steel frame.
- H. Place glazing and stops and manually drive setting screws.

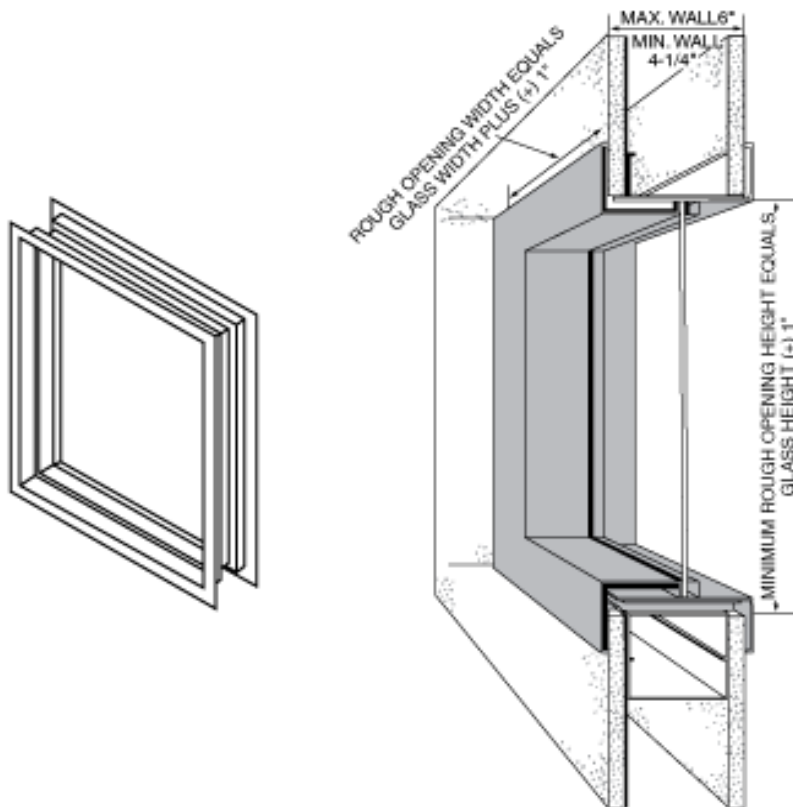

These instructions are provided as guidelines only. Radiation Protection Products bears no responsibility for the installation of these or any other products. We are a manufacturer only and Radiation Protection Products, Inc. does not assume any responsibility for the adequacy of these instructions for a particular application.